

FLOOD WALLS

A floodwall is a self-supporting barrier to floodwater. It may look like a garden wall or privacy fence, but it has more internal reinforcing and a more substantial foundation. This heavier construction keeps the wall from tipping or sliding. The foundation also blocks seepage of water under the wall.

A floodwall does more than keep the building dry. It protects the building from unequal pressure on its walls and erosion (or scour) at its foundation. It also protects the building from damage from floating debris.

Cost and Other Considerations

The typical cost of a basic 4-foot floodwall was about \$120 per linear foot in 1998, about twice as much as a permanent levee. For a given height, a floodwall takes less ground surface area, but it requires more excavation.

It is difficult to justify a private floodwall taller than 4 feet. For many homes, it is less expensive to raise the building 5 feet than to construct a reliable floodwall that tall.

Neighbors often view floodwalls and levees as aggravating their own flood situations. Protecting the area right around a building may be less objectionable than excluding water from your entire lot. Placing the wall close to the building also will reduce construction costs and your dependence on pumps.

Points to Remember:

- Floodwalls must be built strong enough, above and below ground, to withstand the force of standing water. Have an engineer analyze the design to make sure it can handle the stress of potential water current.
- Before you dig, find out where water, gas, electrical and phone lines are. Ask your utility providers to mark these lines for you. Also locate and avoid cutting your sewer line.
- Rain that falls inside the wall needs a way to get out when it's NOT flooding (through drains) and when it IS flooding and the drains are plugged (using pumps).
- Test the closure and pump systems annually.
- Floodwalls have natural enemies: burrowing creatures and tree roots. Check your floodwall each year for cracks and signs of tunneling.
- A floodwall may require a building permit and may fall under height and set-back limitations of a fence ordinance. Check with the local building or permit office.
- Some communities review plans to be sure the floodwall will not interfere with drainage and will not diminish flood storage capacity in violation of local law.
- Plan for your safety in a flood. Decide ahead of time when you'll abandon a flood fight and save your life.

Fail safe Design



Your floodwall should be designed to allow water to come over the top before the wall is broken by the unbalanced pressure created by standing water. If a floodwall fails suddenly, the water and parts of the wall may come crashing into your building.

Never add to the height of a floodwall without making sure the foundation can handle the extra load.

A system with well-maintained automatic closures and pumps will provide protection when no one is home.

Openings in a floodwall need closures that are as strong as the wall, watertight and easy to install quickly in a flood threat.

Additional flood protection and recovery information is available from the parish office of the Louisiana Cooperative Extension Service or from our web site at

www.louisianafloods.org.

Extension's flood mitigation work is supported by the Federal Emergency Management Agency through its Hazard Mitigation Grant Program. The HMGP is administered in Louisiana by the Louisiana Office of Emergency Preparedness.



Louisiana State University
Agricultural Center
Louisiana Cooperative Extension Service

Typical Floodwall

Wood, cement blocks, bricks or poured concrete can be used. Use structural and waterproofing materials that will not be damaged by termites, wildlife or pets.

Provide closures - gates that float, roll or swing into place, removable panels, sandbags or water-inflated tubing.

A small levee at the driveway opening can provide protection from low flood levels.

Be prepared to pump out rain that falls inside the wall during a flood.

Buttresses at corners and at intervals along the wall add strength. Weaker materials require more reinforcing.


Waterproof sealant or film can be applied to the surface or sandwiched between the bricks or blocks. Choose a material that will sustain its properties under the conditions of use - on an exterior surface exposed to sunlight or sealed in an airtight, dark space.

Optional veneering. Brick tile can be added over a sealant coating to create the look of brick at a lower cost. A full brick veneer over a sealant or film requires a larger foundation.

Place drains at the base of the wall wherever water flows off your property. Use flap-valves or screw caps to prevent back-flow during a flood.

Bury the foundation so it will resist toppling and be unaffected by erosion or scour. A taller floodwall needs to be stronger and have a larger foundation than a shorter one.

Steel rebar strengthens the foundation and ties the wall to the foundation. Lock the rebar in the wall by filling blocks with mortar.

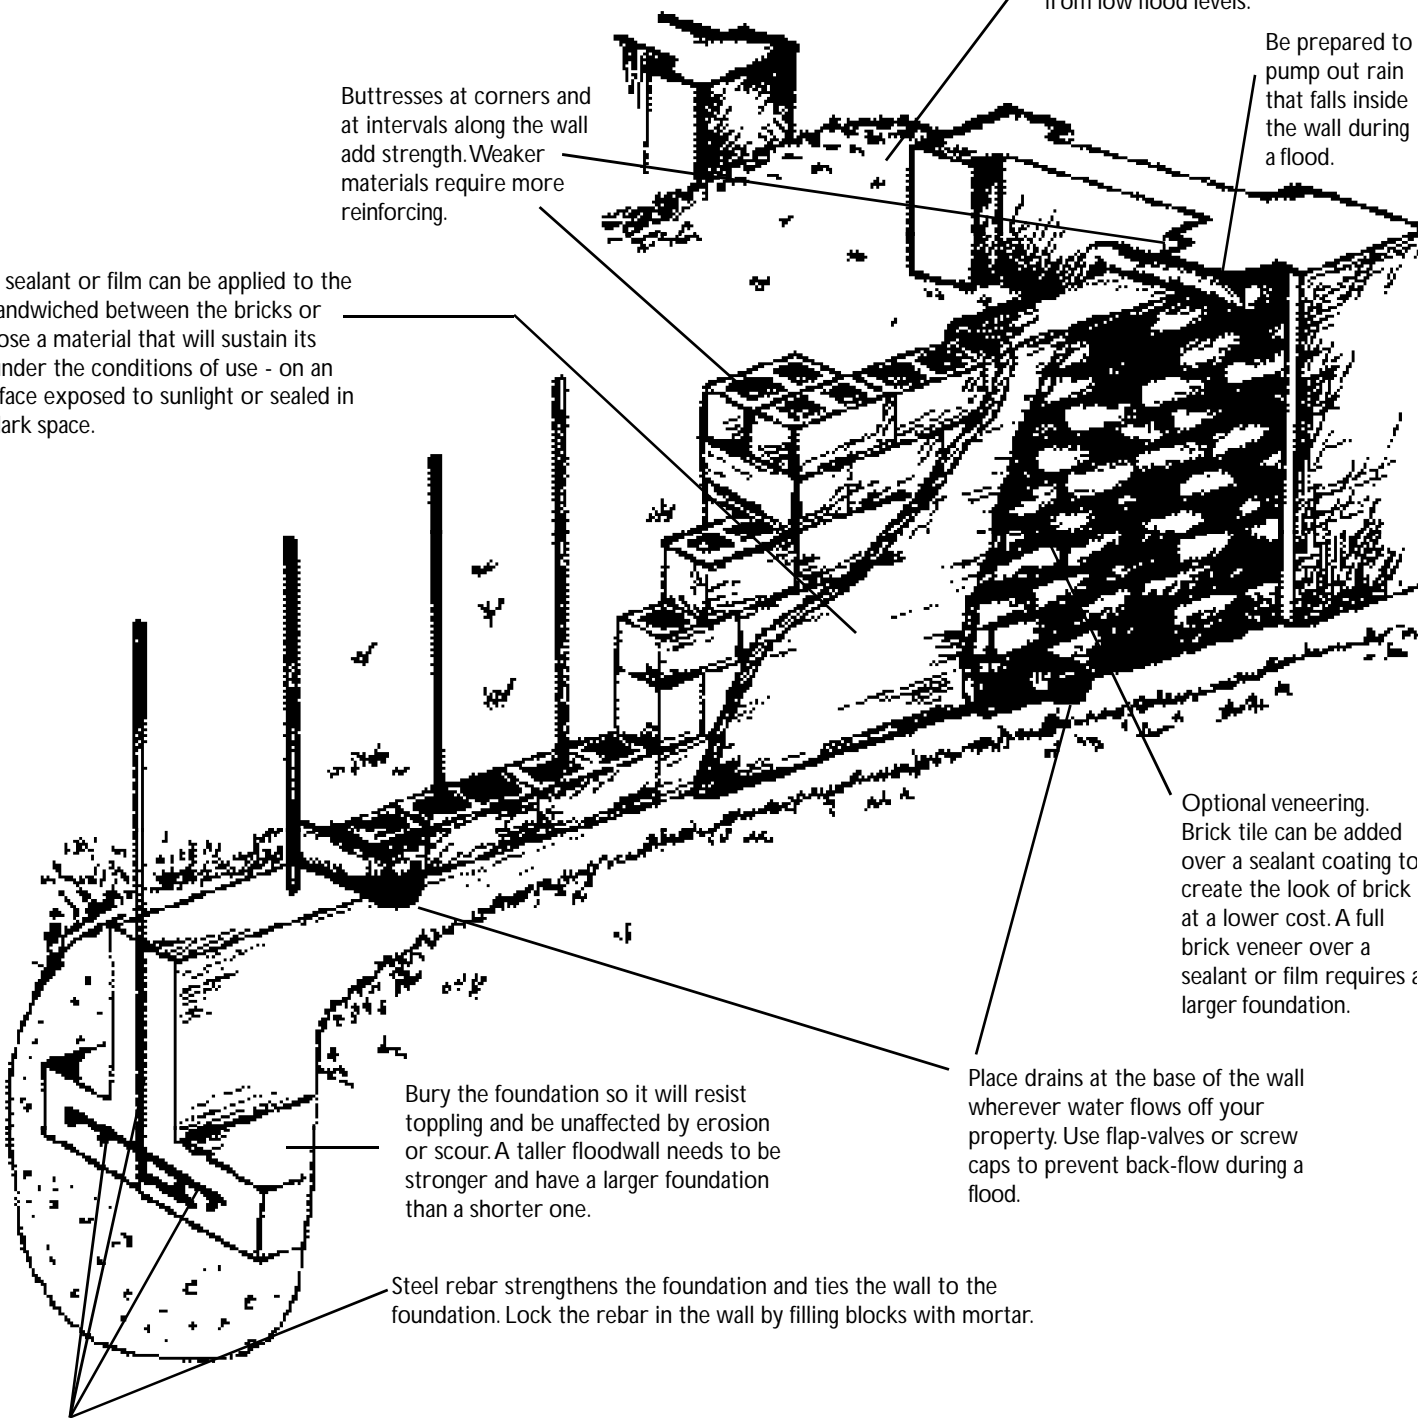

Pat Skinner, Disaster Programs Coordinator
 David Bankston, PhD, Specialist (Engineering)
 Claudette Reichel, EdD, Specialist (Housing)
 Gene Baker, P.E., Associate Vice Chancellor (Information Technology)
Louisiana State University Agricultural Center, William B. Richardson, Chancellor
Louisiana Cooperative Extension Service, Jack L. Bagent, Vice Chancellor and Director

Pub.2745 (15M) 7/99

Issued in furtherance of Cooperative Extension work, Acts of Congress of May 8 and June 30, 1914, in cooperation with the United States Department of Agriculture. The Louisiana Cooperative Extension Service provides equal opportunities in programs and employment.